

MAIDEX

ONICK ENIDE Colour Screen Videophone 9579

LCD Colour Screen

Handset

OVERVIEW

Adjustments: call tone volume switch (3 levels), picture hue, contrast and

Intercommunicating call and door call.


Programmable privacy duration time and number of rings.

2 LEDs indicate the privacy is activated and door open.

It includes 4 buttons: "camera recall", "door open", "service" and "privacy".

LCD monitor specific for "6 wire" videokits (CVK4K, CVR4KV and CVK8K 6200 Series Videophone incorporating a 3.5" Hi-Res full colour active matrix

ART. 6256

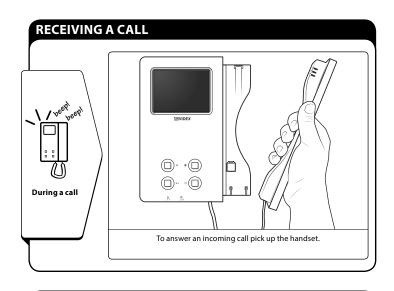

0

The LED behind the lock symbol $0-\pi$ will illuminate to indicate that


the door is open (if the LD terminal was connected during the installation).

Press the lock button 0π to


OPEN THE DOOR


During a

conversation

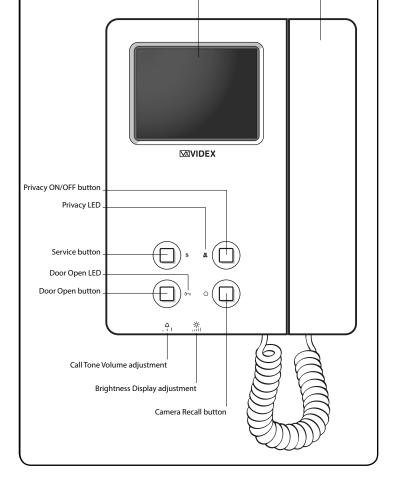

SERVICE BUTTON

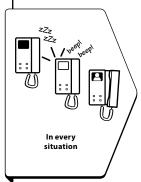

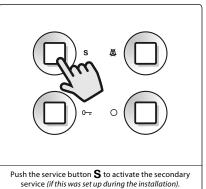




To set up the function of the service button, please contact Videx Technical.

PRIVACY FUNCTION




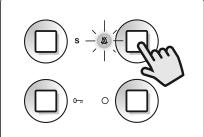

Press the privacy button 💢 to enable the privacy function. The LED behind the privacy symbol $\begin{tabular}{l} \begin{tabular}{l} \begi$ illuminate to indicate that the privacy is enabled.




During an incoming call, with the privacy enabled, the videophone will not ring and no picture will be displayed.

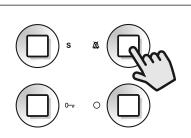

The privacy function will automatically switch OFF after the programmed time expires or by pressing the privacy button again.

CAMERA RECALL



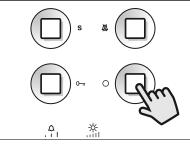

Pick up the handset and then push the camera recall button \bigcirc as many times as the ID value of the door panel (e.g. if recalling the picture from door ID 2, press this button twice, for door ID 3 press this button 3 times etc.). The videophone display will show the picture from the camera on the relevant outdoor station recalled.



During 'Camera Recall' it is possible:

To start a conversation;


To push the lock button 0π to open the door;


To push the service button $\, {f S} \,$ to activate the secondary service.

When the conversation time (set up during the installation) has ended, the videophone stops all communication and the system returns to the standby condition.

Hang up the handset to end the conversation.


CALL TONE VOLUME ADJUSTMENT

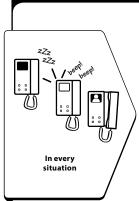

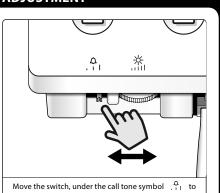


Move the switch, under the call tone symbol $\begin{bmatrix} \Delta \\ -1 \end{bmatrix}$ to adjust the call tone volume level. Move to the left for a low call tone level, to the centre for a medium call tone level and to the right for a high call tone level.

BRIGHTNESS DISPLAY ADJUSTMENT

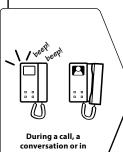

camera recall mode

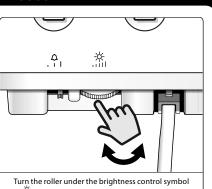

to adjust the brightness of the picture. Any adjustment to the left will reduce the brightness and any adjustment to the right will increase the brightness.